




899 N Centennial Ave
West Fork AR 72774

Assembly Guide for SE36 and SE3T

Following these steps can easily complete assembly of the SE36 or SE3T steps.

Step 1. To understand the location of the parts

If you have never assembled these steps before, turn a tread upside down and locate the tread support against the inside of the outer cleat on the bottom of the step tread. (See diagram below) Note the arrow on the tread. This indicates the front of the step. Do not fasten anything yet.

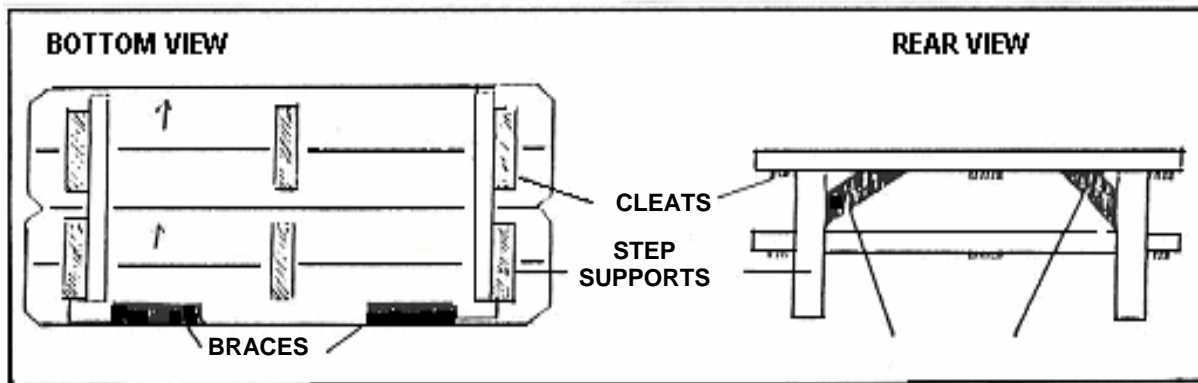

Step 2. To assemble the step

Place the step supports in the upright position about the right width apart. Put the lower tread in place first, with the arrow to the front. Slide the step supports out until they are right against the cleats and the tread is pushed all the way back on the step support. Make sure the step supports are straight up and down.

Screw the tread into the step supports.

Position the top step so the step supports are against the cleats and the tread is as far back as the cleats will allow.

BRACES

Screw the tread to the step supports.

Turn the steps over on a non-scratching surface. Locate the angle braces at the top rear of the steps and screw in place.

* For SE3T use two (2) long braces for the top tread.

Step 3. To maintain your steps

We recommend re-coating your redwood steps with A & B Wood finish, or a similar product, at least twice a year.